
## IN-LINE BLOW-OFF

## DEAD END BLOW-OFF

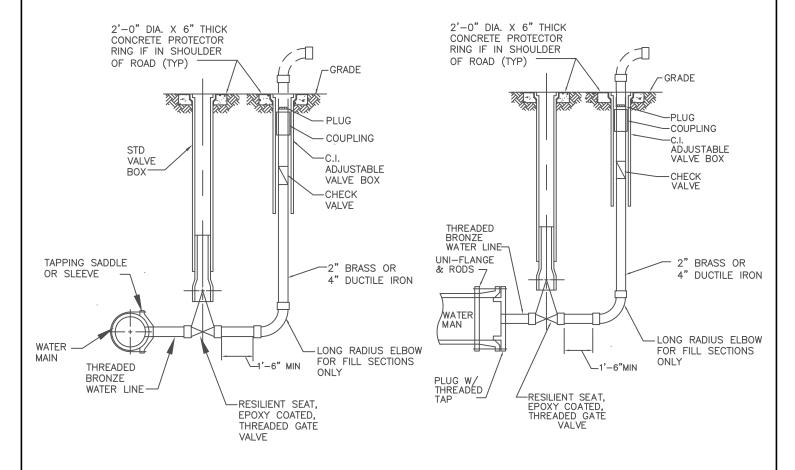

## **GENERAL NOTES:**

- 1. INSTALL 2" BLOW-OFF ON 2" THRU 18" MAINS.
- 2. INSTALL 4" BLOW-OFF ON 20" OR LARGER MAIN.
- 3. IF THE SEPARATION BETWEEN THE CONTROL VALVE AND THE BLOW-OFF DOES NOT ALLOW THE INSTALLATION OF THE CONCRETE PROTECTOR RINGS, A 24" BY 24" BY 6" THICK CONCRETE PAD SHALL BE FORMED AND POURED AROUND THE VALVE BOX. THE EDGE OF THE VALVE BOX RIM MUST BE AT LEAST 8" FROM THE EDGE OF THE CONCRETE PAD.

